
3. Software Update

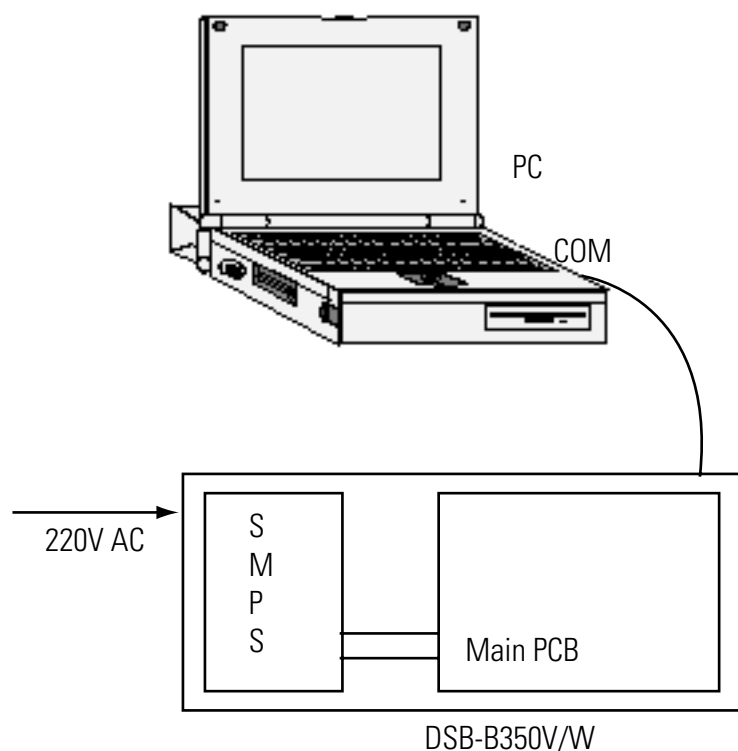


Fig. 3-1

- 1) Prepare PC and DSB-B350V/W as about Fig. 3-1
- 2) Open DTB, TRM file while executing HYPERTERMINAL of PC
PORT : Select to COM1 port currently used.
Baudrate : 115200
- 3) Run Hyperterminal and turn(power) on DSB-B350V/W,
After Hyperterminal monitor display some message, press 'd' key
-DSB-B350V/W : Samsung brand FTA model
Loader version x . x
- 4) Send a file at downlode ROM image. (PROTOCOL : 1K XMODEM)
- 5) Select main program (C : DSB-B350V/W final.bin) by each kinds as selecting the file send of transfer or hypertermianl.
- 6) Check if the normal message appears.

MEMO